# General\_NVR2XXX-4KS2\_MultiLang\_ V4.001.0000005.0.R.201117

**Release Notes** 

**Foreword** 

#### Disclaimer

- These release notes are for reference only, and the actual product shall prevail.
- Succeeding products and release notes are subject to change without notice.
- If there is any uncertainty or controversy, please refer to our final explanation.

## Trademarks

All the company names and trademarks mentioned herein are the properties of their respective owners.

# **Table of Contents**

| Foreword  | 1 |
|---|---|
| Release Notes   | 1 |
| 1.1 Overview  | 1 |
| 1.2 Product Introduction  | 1 |
| 1.3 New Features  | 1 |
| 1.4 Fixed Bugs  | 3 |
| 1.5 Instructions for New Features                               | 3 |
| 1.5.1 One-click Arming/Disarming                                | 3 |
| 1.5.2 New languages supported: Traditional Chinese and Japanese | 3 |
| 1.5.3 PoE Enhancement Mode                                      | 4 |
| 1.5.4 Remote Initialization                                     | 4 |
| 1.5.5 Cloud Update Reminder                                     | 5 |
| 1.6 Compatibility   | 6 |
| 1.7 Software Environment  | 6 |
| 1.8 Pending Issues  | 6 |
| 1.9 Update Guide  |   |

# **Release Notes**

#### 1.1 Overview

| Item                         | Description   |  |
|------------------------------|---|--|
| Product name                 | Network Video Recorder  |  |
| Version                      | V4.001.0000005.0  |  |
| Software package information | General_NVR2XXX-4KS2_MultiLang_V4.001.0000005.0.R.201117.zip  |  |
| Model                        | NVR2104-4KS2, NVR2108-4KS2, NVR2108HS-8P-4KS2, NVR2116-4KS2, NVR2104-P-4KS2, NVR2108-8P-4KS2, NVR2104HS-4KS2, NVR2108HS-4KS2, NVR2108HS-4KS2, NVR2106HS-4KS2, NVR2104HS-P-4KS2, NVR2104HS-P-4KS2, NVR2104HS-P-4KS2, NVR2204-4KS2, NVR2204-P-4KS2, NVR2204-P-4KS2, NVR2204-P-4KS2, |  |
| Onvif Version                | NVR2208-8P-4KS2<br>2.6.1  |  |
| OS requirement               | None  |  |
| Release date                 | 2020-11-17  |  |

#### 1.2 Product Introduction

This product is mainly used indoors. Combined with IP cameras, you can use this NVR to complete real-time monitoring and recording. It supports configuring basic parameters by using mouse, and you can build a security monitoring network through web or other professional software developed by Dahua. Product functions include real-time monitoring, record playback, alarm and other auxiliary configuration functions.

#### 1.3 New Features

| Feature | Description |
|---------|-------------|
|---------|-------------|

| Feature  | Description  |
|--|--|
| Security baseline V2.1   | <ul> <li>Blocked dangerous commands in the system.</li> <li>Supports disabling unsafe services, and those services are disabled by default.</li> <li>Important operations log.</li> <li>Network data transfer encryption control.</li> <li>Non-sensitive data information saved in device-end.</li> <li>Secondary authentication for restoring factory defaults.</li> <li>Record logs of important operations.</li> <li>Added prompts of data deletion.</li> </ul>   |
| One-click disarming  | <ul> <li>Supports one-click disarming, which is disabled by default.</li> <li>Supports disarming by period. Users can disarm in the set time period, and cancel disarming out of the period.</li> <li>Supports individually disarm linkages such as Buzzer, Show Message, Alarm-out Port and Send Email.</li> <li>The Live interface uses a bell icon on the upper-right corner of video channels to display disarming status. The intact bell icon is displayed by default, and when disarming is enabled, the bell icon is displayed with a slash.</li> <li>Supports synchronizing disarming configuration from remote IPCs.</li> <li>Supports enabling and disabling disarming on the upper-right corner of video channels on Live interface.</li> <li>Supports one-click disarming function on client software such as DMSS client.</li> </ul> |
| Traditional Chinese and Japanese                                     | The firmware supports traditional Chinese and Japanese.  |
| MP4 format   | In video playback interface, video clip support MP4 format.  |
| PoE enhancement mode   | PoE port is limited to 10Mbps mode, which increases the transmission distance.   |
| Display Initialization failure reason                                | Display error code and reason, and log when camera initialization fails.   |
| Reset Web password   | You can reset Web password through reserved mobile phone number of mailbox.  |
| Optimized the compatibility of Private Protocol Authentication Mode. | When compatibility mode causes an abnormal IPC connection, the system prompts users to switch authentication mode.   |
| Cloud upgrade pop-up reminder  | Enable Auto-Check for Updates and System Update Notifications. When the device detects that the cloud upgrade version is available, it supports the cloud upgrade pop-up reminder function after login.  |

## 1.4 Fixed Bugs


None.

#### 1.5 Instructions for New Features

#### 1.5.1 One-click Arming/Disarming


Support for one-click to arm or disarm alarm linkage actions in ALARM > Disarming.

Supports disarming by period. Users can disarm in the set time period, and cancel disarming out of the period. Supports synchronizing disarming configuration from remote IPCs.

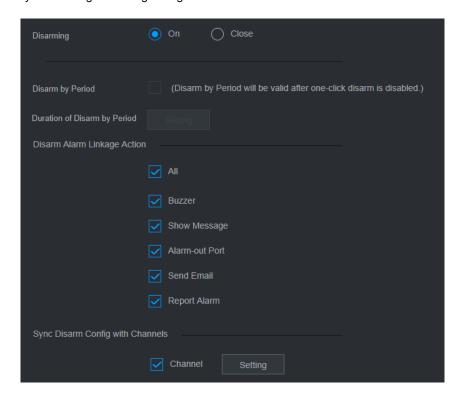

#### languages supported: Traditional Chinese and 1.5.2 New **Japanese**


This release supports four new languages: Traditional Chinese and Japanese. You can set those languages in start-up wizard or in SYSTEM > General > Basic.

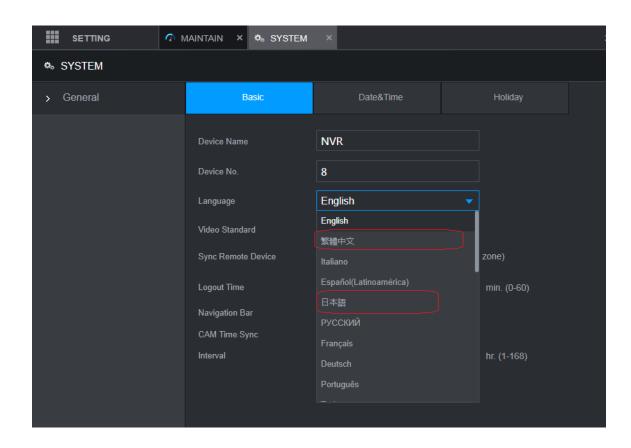

#### 1.5.3 PoE Enhancement Mode

PoE port is limited to 10Mbps mode, which increases the transmission distance.

With Enhancement Mode on, the port reduces the rate to 10Mbps and has an effective transmission distance of up to 200 meters. With Enhancement Mode off, the maximum rate of the port can be up to 100Mbps. The function is disabled by default.

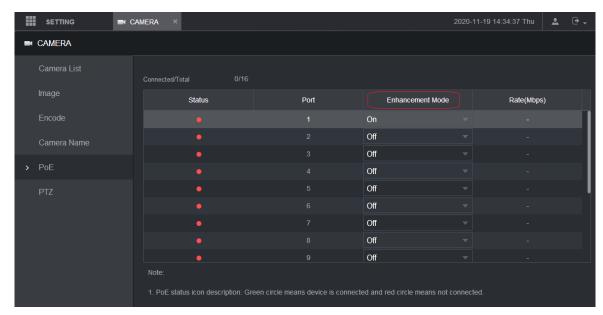


#### 1.5.4 Remote Initialization

In Camera List interface, the device automatically searches, and displays the IPC. With Plug and Play enabled, the device automatically adds the IPC within the LAN.

- All: Displays all the searched devices not added.
- Not Initialized: Displays only the uninitialized cameras.
- Not Auto Connected: Indicates that the device has been automatically connected and will not be added automatically. To add it automatically, you need to remove it manually in advance.


Double-click or manually add IPC, the uninitialized IPC can be initialized automatically and added to the device.

After the IPC is automatically added, if the login fails, you can re-enter the new password on the preview interface of the IPC channel.

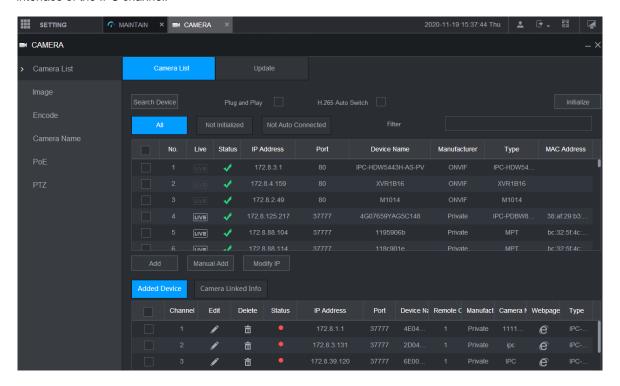

### 1.5.5 Cloud Update Reminder

Enable **Auto-Check for Updates** and **System Update Notifications**. When the device detects that the cloud upgrade version is available, it supports the cloud upgrade reminder function after login.

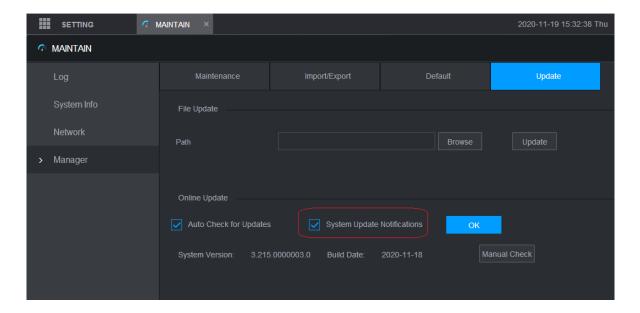

# 1.6 Compatibility

This new baseline version is based on the version of Security Baseline 2.1, and it can be rolled back to the versions after Security Baseline 1.4, but cannot be rolled back to a version prior to Security Baseline 1.4.

#### 1.7 Software Environment

| Model                | Version  |
|----------------------|--|
|                      | 2.6.01.18.03905  |
| VTO2111D-WP-S1       | General_VTO2111D_Eng_P_16M_SIP_V4.300.0000000.7.R.2020031      |
|                      | 1.zip  |
|                      | 2.7.05.01.00990  |
| SmartPss             | General_SmartPSSAC_Eng_Win64-Install_IS_V1.001.0000000.3.R.20  |
|                      | 0907.zip   |
| Dec DDO/Dec Everence | 2.7.01.01.00934  |
| DSS PRO/DSS Express  | General_DSS-PRO_Win32_IS_V7.002.0000002.0.R.20200904.exe       |
|                      | 2.7.03.01.00230  |
| DMSS                 | General_DMSS-Android-Phone_MultiLang_Basic_IS_V1.000.0000002   |
|                      | .2.R.200408.apk  |
| NET SDK              | 2.8.01.01.01315  |
| NETSUK               | General_NetSDK_Eng_Win64_IS_V3.052.0000001.1.R.200514.7z       |
|                      | 2.8.01.01.01485  |
| PlaySDK              | General_PlaySDK_Eng_Windows32_IS_V3.043.0000001.2.R.200821.    |
|                      | zip  |
| Dlaver               | 2.8.02.01.00493  |
| Player               | General_SmartPlayer-Win32_Eng_IS_V4.001.0000001.0.R.200916.zip |
| ConfigTool           | 2.8.02.01.00407  |
|                      | General_ConfigTool_ChnEng_V4.011.0000003.7.R.20200325.zip      |
| DiskManager          | 2.8.02.01.00431  |
|                      | General_DiskManager-Win32_Eng_V1.000.0000003.2.R.200422.7z     |
| NIZBEOOO             | 2.6.01.09.00662  |
| NKB5000              | General_NKB5000_MultiLang_V3.212.0000001.0.R.200318.BIN        |
| NIKDAOOO             | 2.6.01.09.00655  |
| NKB1000              | General_NKB1000_Eng_V3.621.0000000.0.R.200302.zip              |

# 1.8 Pending Issues

None.

# 1.9 Update Guide

- 1. You can upgrade the NVR by ConfigTool, web and USB flash drive. For details, see Upgrade Guide.
- 2. Services such as recording and live view will be paused during the upgrade process. The NVR works normally after upgrade and rebooting.
- 3. The upgrade does not affect previous settings of the NVR.

4. Do not power off during the upgrade process, or the NVR will not boot up properly